



P/N: 10-03-1M00-004 (REV. D)

Description: BNC Straight Male Crimp for LMR100/RG174/RG316 Cable

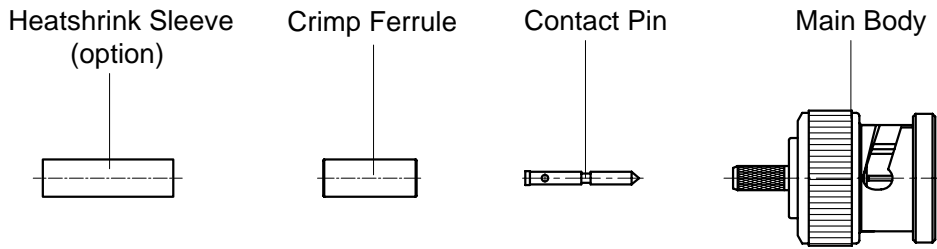


**STEP 1**

- a. Slide the Heatshrink Sleeve onto the cable (option).
- b. Slide the Crimp Ferrule onto the cable.
- c. Strip the cable according to the dimensions as below.

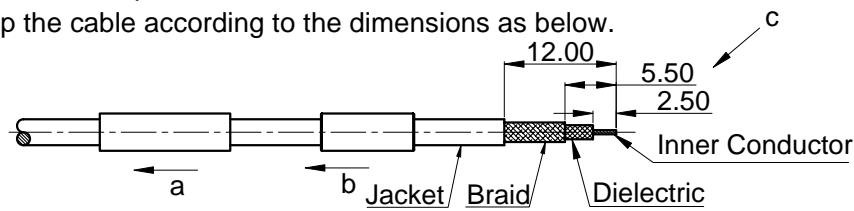


**STEP 2**

- a. Slide the Contact Pin on until it bottom against the cable dielectric.
- b. Solder the Contact Pin onto the cable.

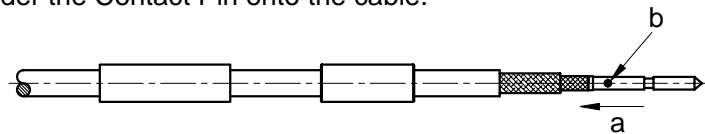


**STEP 3**

- a. Fan the braid.
- b. Slide the cable into the Main Body until it stops.

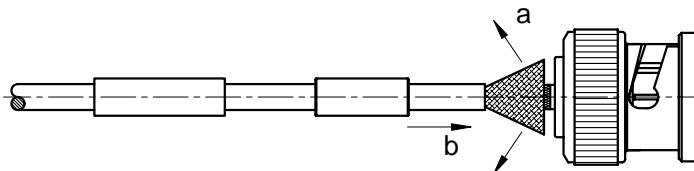


**STEP 4**

- a. Slide the Crimp Ferrule over the braid.
- b. Crimp the Crimp Ferrule with crimping tool (3.25mm HEX.).

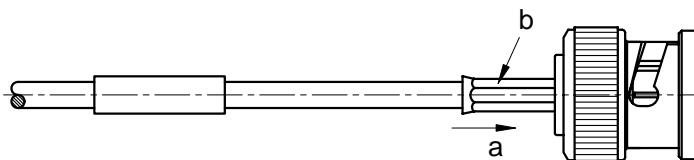

**STEP 5**

- a. Cut the excess of braid if necessary.
- b. Slide the Heatshrink Sleeve over the Crimp Ferrule and heatshrink it in place (option).

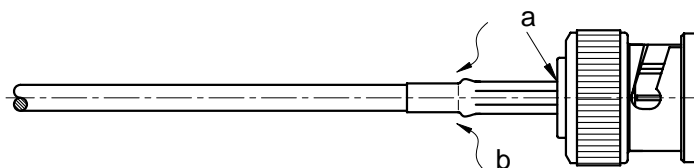

Note: Dimensions in millimeters (mm).