



P/N: 30-02-1B23-030 (REV. B)

Description: MCX Straight Bulkhead Female Crimp for 1.37mm Cable

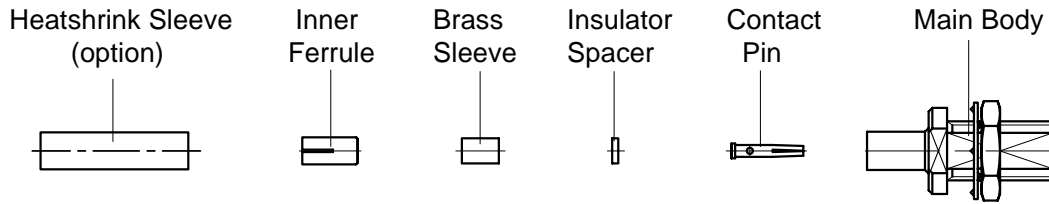


STEP 1

- a. Slide the Heatshrink Sleeve onto the cable (option).
- b. Strip the cable according to the dimensions as below.

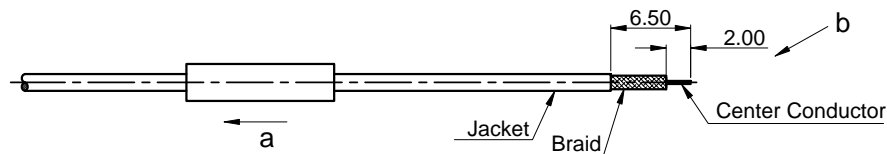


STEP 2

- a. Slide the Inner Ferrule onto the cable's braid until it stops, attention the direction of the Inner Ferrule.
- b. Peel the braid back, over the Inner Ferrule.

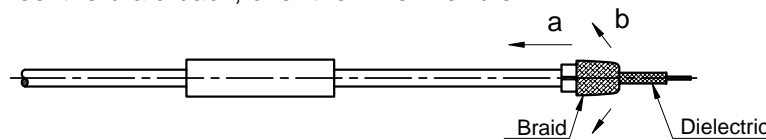


STEP 3

- a. Slide the Brass Sleeve over cable's dielectric until it stops.
- b. Slide the Insulator Spacer over cable's dielectric until it stops.
- c. Solder the Contact Pin to cable center conductor, bottoming on Insulator Spacer.

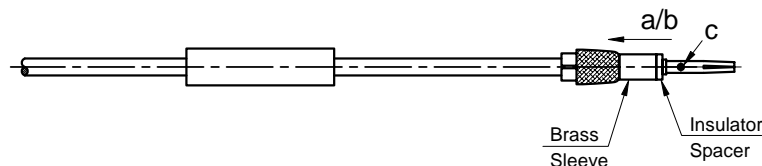


STEP 4

- a. Insert the cable into the Main Body until it stops.
- b. Crimp the Main body tail with crimping tool (2.7mm [.106"] HEX.).

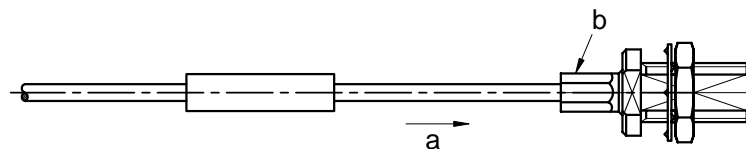

STEP 5

- a. Slide the Heatshrink Sleeve over the Main body tail and heatshrink it in place (option).

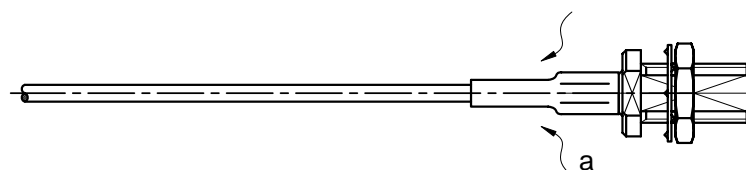

Note: Dimensions in millimeters (mm).