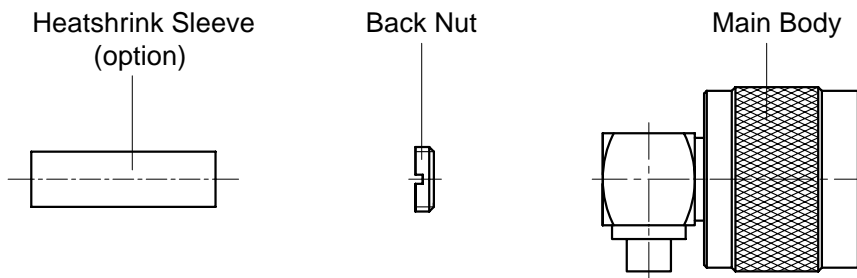
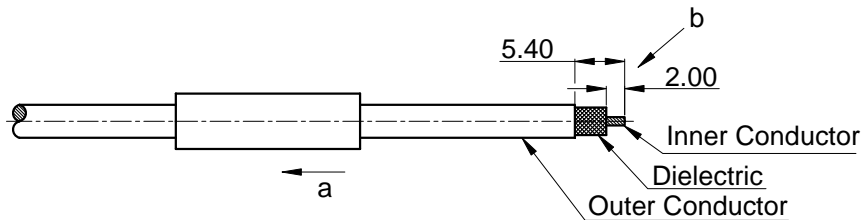


P/N: 50-13-2M06-016 (REV. B)


Description: N Right Angle Male Solder for RG402/.141 Cable

**STEP 1**


- Slide the Heatshrink Sleeve onto the cable (option).
- Strip the cable according to the dimensions as below.

**STEP 2**

- Slide the cable into the body until it stops.
- Solder the inner conductor.
- Solder the cable onto the Main Body.

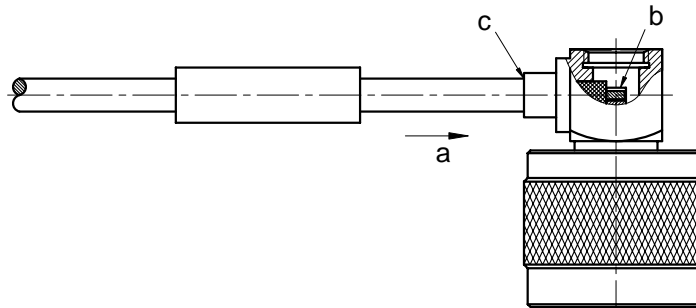**STEP 3**

- Screw the back nut onto the Main Body.
- Slide the Heatshrink Sleeve over the Main Body and heatshrink it in place (option).

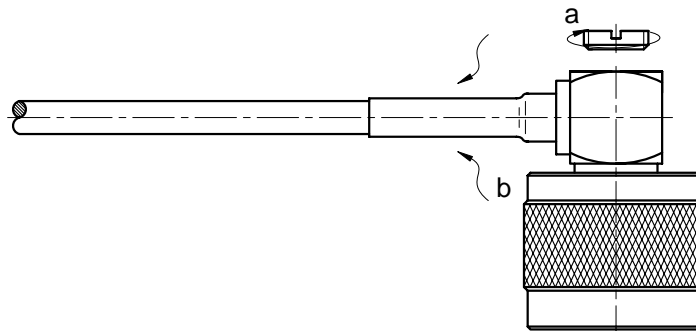

Note: Dimensions in millimeters (mm).