


P/N: 61-03-2M12-005 (REV. A)


Description: RP SMA Straight Male Solder for RG178 Cable

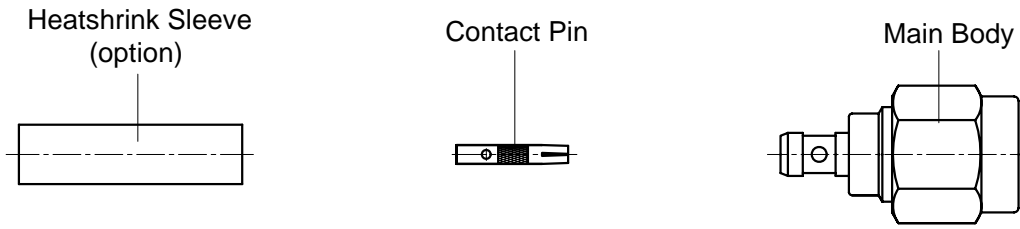

STEP 1


- Strip the cable according to the dimensions as below, then immersion tin the braid and center conductor.
- Slide the Heatshrink Sleeve onto the cable (option).

Tips: Do not nick the cable's dielectric and center conductor.

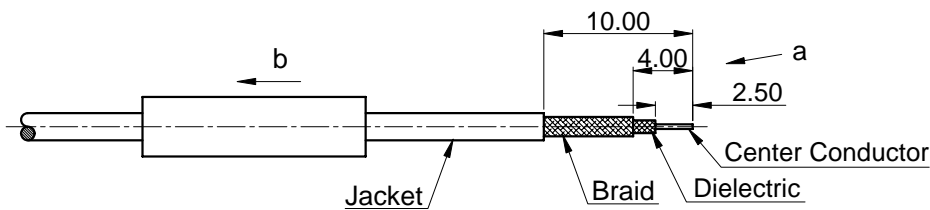


STEP 2

- Slide the Contact Pin onto the inner conductor until it stops.
- Solder the Center Contact onto the cable.



STEP 3

- Slide the cable into the Main Body until it stops.
- Solder the cable onto the Main Body.

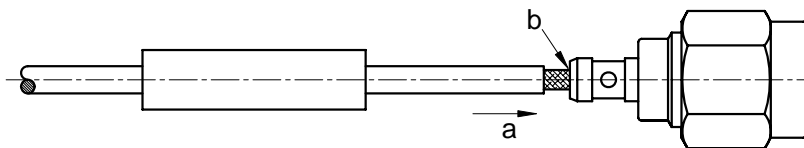

STEP 4

- Slide the Heatshrink Sleeve over the Main Body and heatshrink it in place (option).

