



P/N: 60-03-1M21-154 (REV. C)

Description: SMA Straight Male Crimp for RG142/RG223/RG400 Cable

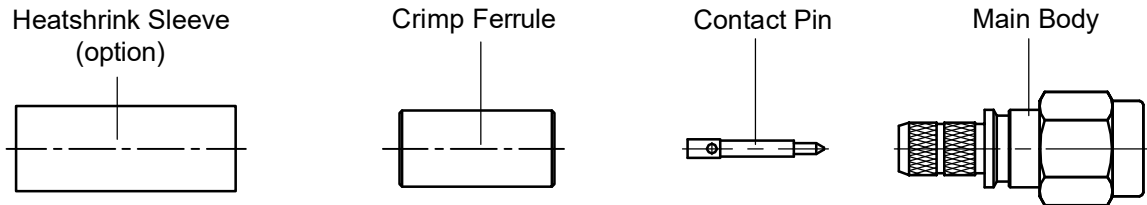


#### STEP 1

- Slide the Heatshrink Sleeve onto the cable (option).
- Slide the Crimp Ferrule onto the cable.
- Strip the cable according to the dimensions as below.

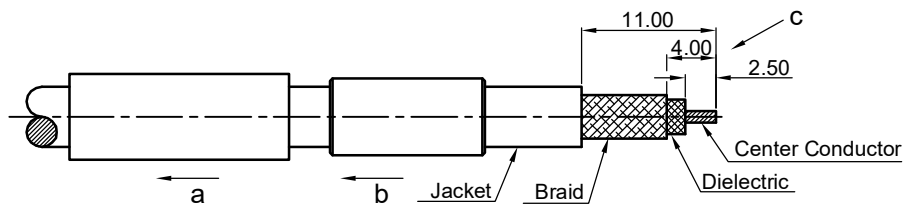


#### STEP 2

- Slide the Contact Pin onto the cable's center conductor until it stops.
- Solder the Contact Pin onto the cable.

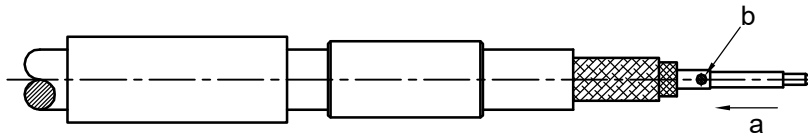


#### STEP 3

- Fan the braid.
- Slide the cable into the Main Body until it stops.

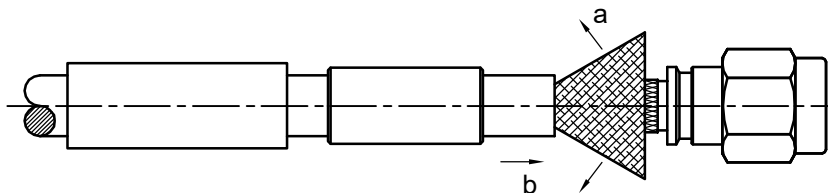


#### STEP 4

- Slide the Crimp Ferrule over the braid.
- Crimp the Crimp Ferrule with crimping tool (5.54mm HEX.).

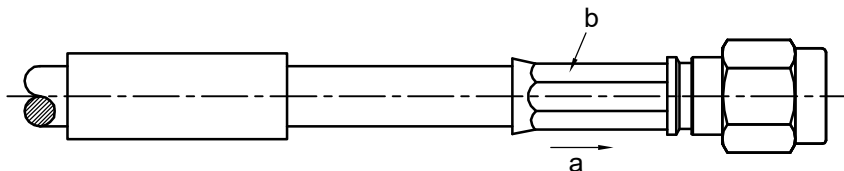

#### STEP 5

- Cut the excess of braid if necessary.
- Slide the Heatshrink Sleeve over the Crimp Ferrule and heatshrink it in place (option).

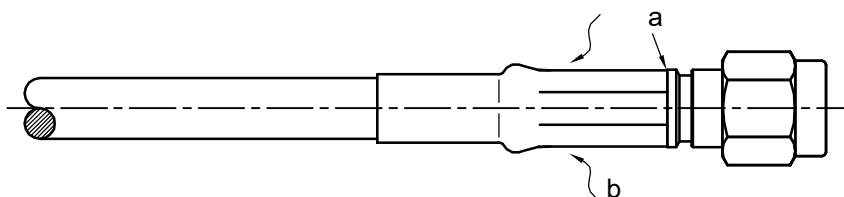

Note: Dimensions in millimeters (mm).